

Level sensor products

Level switches



Introduction

Level switches can be used in a number of tank management applications including:

- Spill prevention
- Automatic shut-in
- Process automation
- Failsafe backup

Switches are available in 2 different kits:

- Standalone single high level switch
- Standalone dual high level switch

Level sensor products

Level switches

Description


Each option contains a float-based, reed switch that detects a level change. The output is either an open or closed circuit depending on the orientation of the float. The travel has approximately 0.5 inch range of motion with 0.25 inches in the open state and 0.25 inches in the closed state.

The switch level can be adjusted from 3 inches from the top to 36 inches. The length of the tubing can also be reduced by removing the top conduit box and cutting the stainless steel tubing to the desired length.

Both switches come with a 2 inch male bushing for installation into an existing tank port or reducer bushing. The single switch version has a hex fitting for installation. The dual version has a square socket for tightening.

Single high level switch

Dual high level switch

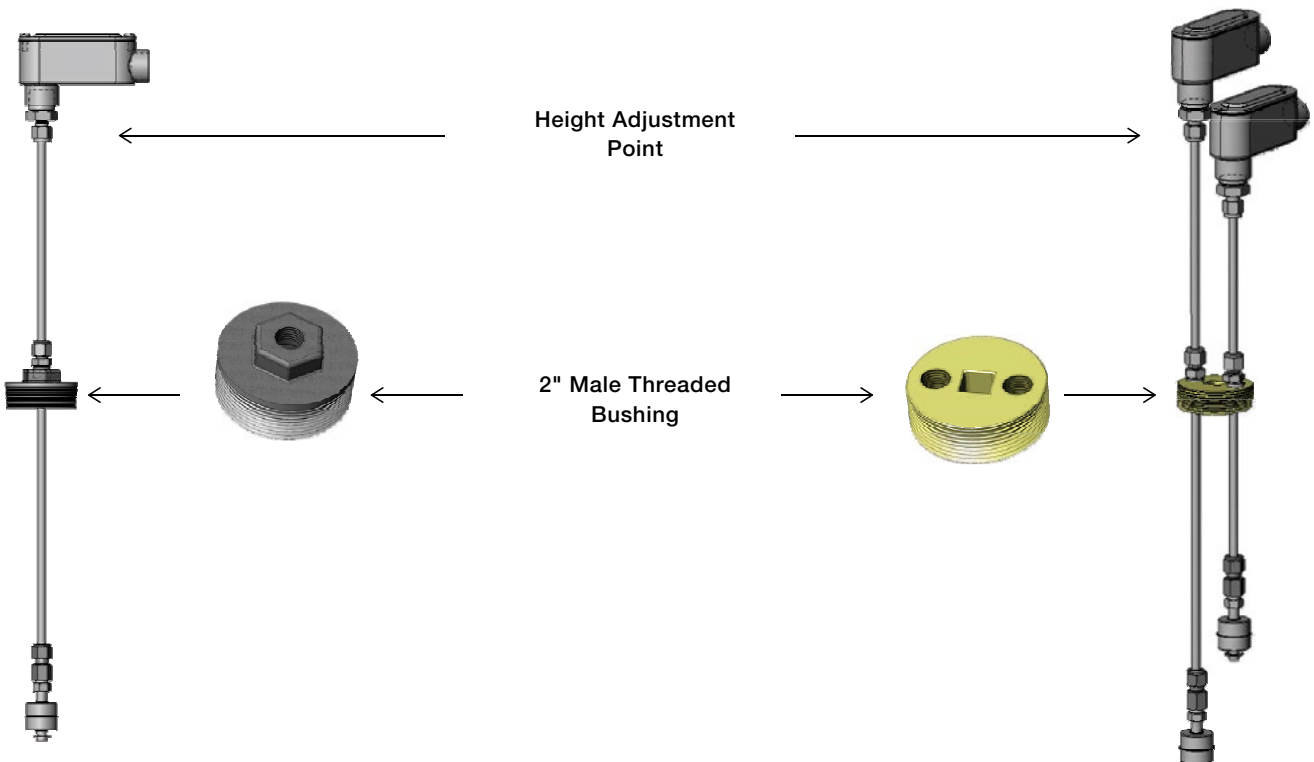

Specifications

Floats

Material	316 Stainless steel (Fiberglass available on request)
Technology	Dry contact reed switch
Switch states	Normally open or normally closed options (Based on float orientation)
Contact rating	100 VA SPST
Max. switching voltage	300 V AC / 350 V DC
Max. switching current	1.0 A AC / 2.5 A DC
Specific gravity	0.72
Max. pressure	900 psi
Temperature range	-40° F to 300° F
Diameter	1.08"
Range of switch level	Adjustable 3" to 36" from top of tank
Hazardous area	Rated for Class 1, Div 1, Group D with intrinsically safe barrier PCBA (2100336-001) or barrier assembly (2100339-001) Rated for Class 1, Div 1, Group C with intrinsically safe barrier PCBA (2100336-002) or barrier assembly (2100339-002)

Contact us

ABB Inc.

Upstream Oil & Gas Process Automation

Toll-free: + 1 800 442 3097

Quotes: totalflow.inquiry@us.abb.com

Orders: totalflow.order@us.abb.com

Training: totalflow.training@us.abb.com

Support: totalflowsupport@us.abb.com

Upstream Oil & Gas Main Office

7051 Industrial Boulevard

Bartlesville, OK 74006

Ph: +1 918 338 4888

Upstream Oil & Gas California Office

4300 Stine Road, Suite 405-407

Bakersfield, CA 93313

Ph: +1 661 833 2030

Upstream Oil & Gas Kansas Office

2705 Centennial Boulevard

Liberal, KS 67901

Ph: +1 620 626 4350

Upstream Oil & Gas Texas Offices

3700 West Sam Houston
Parkway South, Suite 600
Houston, TX 77042

Ph: +1 713 587 8000

3900 South County Road 1290
Odessa, TX 79765
Ph: +1 432 563 5144

150 Eagle Ford Road
Pleasanton, TX 78064
Ph: +1 830 569 8062

www.abb.com/upstream

Note

We reserve the right to make technical changes or modify the contents of this document without prior notice. With regard to purchase orders, the agreed particulars shall prevail. ABB does not accept any responsibility whatsoever for potential errors or possible lack of information in this document.

We reserve all rights in this document and in the subject matter and illustrations contained therein. Any reproduction, disclosure to third parties or utilization of its contents – in whole or in parts – is forbidden without prior written consent of ABB.

Copyright © 2016 ABB Inc.
All rights reserved



Product
webpage